

## **TOMAR MODEL RECT25-W SWITCH CONTROL**

### **ELECTRICAL**

#### **Input Voltage:**

10 – 16 VDC	RECT25-W	Cigar Plug Termination (STD)
12 – 28 VDC	/SWITCH-6FT	6 ft. Cable (OPT)
12 – 28 VDC	/SWITCH-12FT	12 ft. Cable (OPT)

#### **Current Draw – In SINGLE 75 F.P.M. @ 12.8VDC:**

High Power Model	.8 Amps Average
Standard Power Model	.6 Amps Average
Low Current Model	.4 Amps Average

### **SELECTING FLASH RATE**

#### **Cycle Forward**

With the unit turned on, press the Flash Rate selection switch once and then release. Continue until the desired flash rate is reached. The last flash rate selected will become the default flash rate.

#### **Cycle Backward**

With the unit turned on, press the Flash Rate selection switch twice in less than one second and then release. Continue until the desired flash rate is reached. The last flash rate selected will become the default flash rate.

#### **Reset to Flash Rate #1**

With the unit turned on, press and hold the Flash Rate selection switch for more than three seconds and then release. The unit will flash two times to indicate that it has reset. Flash rate #1 will become the default flash rate.

**SELECTABLE FLASH RATES**

1.	NEOBE 150	5 PULSES 150 F.P.M.	
2.	NEOBE 75	5 PULSES 75 F.P.M.	
3.	DOUBLE 250	2 PULSES 250 F.P.M.	
4.	DOUBLE 125	2 PULSES 125 F.P.M.	
5.	SINGLE 375	1 PULSE 375 F.P.M.	
6.	SINGLE 150	1 PULSE 150 F.P.M.	
7.	SINGLE 75	1 PULSE 75 F.P.M.	
8.	MULTI-FLASH 1	CYCLES RATES 1, 3, 5 & 1	(4 SEC. PER RATE)
9.	MULTI-FLASH 2	CYCLES RATES 2, 4, 6 & 7	(4 SEC. PER RATE)
10.	DEMO	CYCLES RATES 1 – 7	(8 SEC. PER RATE)