

930N-4805-0034 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF2	DF1	FC	PF1	PF2
DC				PC
DA				PA
DR2	DR1	RCL/RCR	PR1	PR2

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION	
		REAR / ALLEY STROBES & HALOGENS	FRONT / CORNER STROBES
0	NONE	NONE	NONE
1	RED/WHT	DR1 ALTERNATES WITH PR1	NONE
2	RED/WHT & ORG	DR1 ALTERNATES WITH PR1 DR2, RCL & DA SIMULTANEOUS AND ALTERNATE WITH PR2, RCR & PA SIMULTANEOUS	DF2 & PF2 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS
3	RED/WHT & ORG & BLU	SAME AS MODE 2	DF2 & PF2 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS DC ALTERNATES WITH PC

CONTROL WIRES FOR OPTIONAL HALOGENS

CONTROL WIRE ACTIVATED	HALOGEN LAMP
BROWN	FC (TAKEDOWN)
GRAY	DA (DRIVER ALLEY)
YELLOW	PA (PASSENGER ALLEY)

**NOTE: GREEN control wire activates high intensity to strobes.
 WHITE/BLACK control wire disables front corner strobes (DC & PC) when the lightbar is in Mode 3 and returns the lightbar to Mode 2 operation.
 Apply +12vdc to appropriate control wire to activate desired function.**