

930N-4805-0042 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF2	DF1	SPEAKER	PF1	PF2
DC				PC
DA				PA
DR2	DR1	SPEAKER	PR1	PR2

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION	
		REAR STROBES	FRONT STROBES
1	ORG	DR1 ALTERNATES WITH PR1	DF2 & PF2 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS
2	ORG & BLU	DR2 & PR2 SIMULTANEOUS AND ALTERNATE WITH DR1 & PR1 SIMULTANEOUS	SAME AS MODE 1
RIGHT ARROW	BLU	DR2, DR2 & DR1, DR1 & PR1, PR1 & PR2, PR2, REPEAT	NONE
LEFT ARROW	WHT/BLK	PR2, PR2 & PR1, PR1 & DR1, DR1 & DR2, DR2, REPEAT	NONE
CENTER OUT	BLU & WHT/BLK	DR1 & PR1, DR2 & DR1 & PR1 & PR2, DR2 & PR2, REPEAT	NONE

AUXILIARY CONTROL WIRES

CONTROL WIRE	OPERATION
GRAY	DA & DC DRIVER ALLEY
YELLOW	PA & PC PASSENGER ALLEY
BROWN (Activate when in Modes 1 and or 2)	PURSUIT FRONT STROBES ONLY
GREEN	INTENSITY ALL STROBES
BROWN/WHITE	SPEAKER INPUT
RED/WHITE	SPEAKER INPUT