

930N-7208-0049 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

	DF4	DF3	DF2	DF1	PF1	PF2	PF3	PF4
DC								PC
DA								PA
	DR4	DR3	DR2	DR1	PR1	PR2	PR3	PR4

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION	
		REAR / ALLEY STROBES & FLASHER	FRONT STROBES
0	NONE	NONE	NONE
1	ORG	NONE	DF4 & PF4 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS
2	ORG & BLUE	DR4, PR4 & DA SIMULTANEOUS AND ALTERNATE WITH DR1, PR1 & PA SIMULTANEOUS	DF4 & PF4 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS
3	ORG & BLU & WHT/BLK	DR4, PR4 & DA SIMULTANEOUS AND ALTERNATE WITH DR1, PR1 & PA SIMULTANEOUS <u>REAR FLASHER</u> DR2 ALTERNATES WITH PR2	DF4 & PF4 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS

CONTROL WIRES FOR OPTIONAL HALOGENS

CONTROL WIRE ACTIVATED

BROWN
 RED/WHITE
 BROWN/WHITE
 GRAY
 YELLOW
 WHITE/BLACK

HALOGEN LAMP

DF2 & DC (TAKEDOWN)
 PF2 & PC (TAKEDOWN)
 DF3 & PF3 (TAIL LIGHTS)
 DF3 (TURN SIGNAL)
 PF3 (TURN SIGNAL)
 DR2 & PR2 (REAR FLASHER)

**NOTE: GREEN control wire activates high intensity to strobes.
 Apply +12vdc to appropriate control wire to activate desired function.**