

930N-7208-0074 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF4	DF3	DF2	DF1	PF1	PF2	PF3	PF4
DC							PC
DA							PA
DR4	DR3	DR2	DR1	PR1	PR2	PR3	PR4

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION	
		REAR / ALLEY STROBES	FRONT / CORNER STROBES
0	NONE	NONE	NONE
1	ORG & BLU	DR4 & PR4 SIMULTANEOUS AND ALTERNATE WITH DR1 & PR1 SIMULTANEOUS (6 PULSES PER BURST) DR2 ALTERNATES WITH PR2 (6 PULSES PER BURST) DR3 ALTERNATES WITH PR3 (3 PULSES PER BURST) DA ALTERNATES WITH PA (3 PULSES PER BURST)	DF4 & PF4 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS (6 PULSES PER BURST) DF2 ALTERNATES WITH PF2 (6 PULSES PER BURST) DF3 ALTERNATES WITH PF3 (3 PULSES PER BURST) DC ALTERNATES WITH PC (3 PULSES PER BURST)
2	BLU	SAME AS MODE 1	DF4 & PF4 SIMULTANEOUS AND ALTERNATE WITH DF3 & PF3 SIMULTANEOUS (6 PULSES PER BURST) DF2 ALTERNATES WITH PF2 (6 PULSES PER BURST) DC ALTERNATES WITH PC (3 PULSES PER BURST)

CONTROL WIRES FOR OPTIONAL HALOGEN LAMPS

CONTROL WIRE ACTIVATED	HALOGEN LAMP
RED/WHITE	RC (REAR WORK)
BROWN	FC (TAKEDOWN)
GRAY	DA (DRIVER ALLEY)
YELLOW	PA (PASSENGER ALLEY)

NOTE:

1. When ordered with the **PREEMPTION OPTION** the **FRONT** strobes will operate in **HIGH PRIORITY PREEMPTION** only when the lightbar is operated in **Mode 1**.
2. Apply **+12vdc** to appropriate control wire to activate desired function.