

930N1-4805-0037 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF2	DF1	FC	PF1	PF2
DC				PC
DA				PA
DR2	DR1	RC	PR1	PR2

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION
		FRONT / CORNER / ALLEY STROBES
1	ORG (OPTIONAL PREEMPTION)	DF2 & PF2 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS (6 PULSES PER BURST) DC ALTERNATES WITH PC (3 PULSES PER BURST) DA ALTERNATES WITH PA (3 PULSES PER BURST)
2	ORG & WHT/BLK	DF2 & PF2 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS (6 PULSES PER BURST) DC ALTERNATES WITH PC (3 PULSES PER BURST) DA ALTERNATES WITH PA (3 PULSES PER BURST)

NOTE: GROUNDING the GREEN control wire activates low intensity to strobes. Apply +12vdc to all other control wires to activate desired function.

CONTROL WIRES FOR OPTIONAL HALOGEN LAMPS

CONTROL WIRE ACTIVATED	LAMP
BROWN	FC (TAKEDOWN)
GRAY	DA (DRIVER ALLEY)
YELLOW	PA (PASSENGER ALLEY)

CONTROL WIRES FOR OPTIONAL HALOGEN FLASHER LAMPS

CONTROL WIRE ACTIVATED	LAMP
BROWN	FC or SPLIT HS DF1 & PF1 FLASHER
BROWN OR RED/WHT	DA, PA & (FC or DF1 & PF1) FLASHER
BRN/WHT	DA & PA FLASHER
	SPLIT HS DF1 & PF1 FLASHER

CONTROL WIRES FOR OPTIONAL PRE2-1C PREEMPTION

CONTROL WIRE ACTIVATED	LAMP
BRN/WHT	PRE2-1C in FC