

930N1-4805 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF2	DF1	FC	PF1	PF2
DC				PC
DA				PA
DR2	DR1	RC	PR1	PR2

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION
		FRONT / CORNER / ALLEY STROBES
1	ORG & BLU	DF1 & PF1 SIMULTANEOUS AND ALTERNATE WITH DF2 & PF2 SIMULTANEOUS (6 PULSES PER BURST)
2	ORG & BLU & WHT/BLK *PREEMPTION* OPTIONAL	DF1 & PF1 SIMULTANEOUS AND ALTERNATE WITH DF2 & PF2 SIMULTANEOUS (6 PULSES PER BURST) DA ALTERNATES WITH PA (3 PULSES PER BURST)

CONTROL WIRES FOR OPTIONAL LAMPS

CONTROL WIRE ACTIVATED

BRN
RED/WHT
GRY
YEL

or

YEL

LAMP

DA DRIVER ALLEY
PA PASSENGER ALLEY
DC DRIVER CORNER
PC PASSENGER CORNER

DC & PC HALOGEN FLASHING CORNERS

CONTROL WIRES FOR OPTIONAL FC

BRN/WHT CONTROL WIRE ACTIVATES ONE OF THE FOLLOWING:

- HALOGEN TAKEDOWN OR TAKEDOWN FLASHER
- PRE2-1C PREEMPTION EMITTER
- 930-SS DUAL STROBE

NOTE: GREEN control wire activates high intensity to strobes.

Apply +12vdc to appropriate control wire to activate desired function.