


# 930N1-7208-0031 FLASH PATTERN

## LIGHTBAR LAMP CONFIGURATION

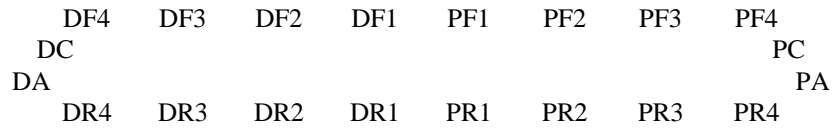

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION
		FRONT / CORNER / ALLEY STROBES
0	NONE	NONE
1	ORG	DF2 ALTERNATES WITH PF2
2	ORG & BLU	DF3, PF3 & DA SIMULTANEOUS AND ALTERNATE WITH DF2, PF2 & PA SIMULTANEOUS DF4 & PF4 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS
3	ORG & BLU & WHT/BLK  *PREEMPTION* Optional	DF3, PF3 & DA SIMULTANEOUS AND ALTERNATE WITH DF2, PF2 & PA SIMULTANEOUS DF4 & PF4 SIMULTANEOUS AND ALTERNATE WITH DF1 & PF1 SIMULTANEOUS DC ALTERNATES WITH PC
4	ORG & WHT/BLK  *Non Preemption Signal*	SAME AS MODE 3

**NOTE: GREEN control wire activates high intensity to strobes.  
Apply +12vdc to appropriate control wire to activate desired function.**