

930N1-7208 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF4	DF3	DF2	DF1	PF1	PF2	PF3	PF4
DC							PC
DA							PA
DR4	DR3	DR2	DR1	PR1	PR2	PR3	PR4

MODE	CONTROL WIRES ACTIVATED	LAMP OPERATION
		FRONT / CORNER / ALLEY STROBES
1	ORG	DF2 & PA SIMULTANEOUS AND ALTERNATE WITH PF2 & DA SIMULTANEOUS (6 PULSES PER BURST) DC ALTERNATES WITH PC (3 PULSES PER BURST)
2	BLU	DF4, DF2, PF3 & PA SIMULTANEOUS AND ALTERNATE WITH PF4, PF2, DF3 & DA SIMULTANEOUS (6 PULSES PER BURST) DC ALTERNATES WITH PC (3 PULSES PER BURST)
3	ORG & BLU	SAME AS MODE 2

CONTROL WIRES FOR OPTIONAL HALOGENS

CONTROL WIRE	LAMP	HALOGEN FUNCTION
RED/WHITE	PF1	TAKEDOWN
BROWN	DF1 or (DF1 & PF1)	TAKEDOWN or (FRONT FLASHER)
GRAY	DA	DRIVER ALLEY
YELLOW	PA	PASSENGER ALLEY
BRN/WHT	DR1 or (& PR1)	REAR WORK or (REAR FLASHER)

CONTROL WIRE FOR OPTIONAL 930-PRE2-1C PREEMPTION EMITTER

CONTROL WIRE	STROBE
BRN/WHT	DF1 or PF1

**NOTE: GREEN control wire activates high intensity to strobes.
Apply +12vdc to appropriate control wire to activate desired function.**