

950N-6407 NEOBE LIGHTBAR
PS02 - FACTORY SETTING FLASH PATTERN

NFPA application

Mode C.R.O.W.

+12 vdc **ORANGE** Control Wire Activated

Front & Corner Warning Lamps: *Inboard/Outboard with Corners - 6 pulse Neobe*

Rear & Side Warning Lamps: *Inboard/Outboard with Sides - 6 pulse Neobe*

Mode C.R.O.W.

+12 vdc **ORANGE & BLUE** Control Wires Activated

Front & Corner Warning Lamps: *Inboard/Outboard with Corner - 6 pulse Neobe*

Rear & Side Warning Lamps: *Inboard/Outboard with Sides - 6 pulse Neobe*

Mode B.R.O.W.

+12 vdc **BLUE** Control Wires Activated

Front & Corner Warning Lamps: *In/Out with Corners (DF1/PF1 off) - 6 pulse Neobe*

Rear & Side Warning Lamps: *Inboard/Outboard with Sides - 6 pulse Neobe*

Traffic Directional Modes on Rear Lamps - Left, Right or Center Out - 6 pulse Neobe

Front Warning Lamps: *Inboard/Outboard without Corner - 6 pulse Neobe*

Any other combinations of the ORG, BLUE and WHITE/BLACK control wires = OFF.

See 950N-6407 Appendix A for additional 950N-6407 Control & Power Wire functions.

The 950N-6407 NFPA configuration can be used as part of the Tomar Pumper System-2 NFPA 1901 Certified System.

Configure lamp colors as follows:

- Forward facing lamps may be Red, Blue, or ½ Red and Blue.
 - Select Clear lamps in DF1/PF1 or DF1, PF1, DC & PC.
 - Select Amber Alley Halogen Flasher in DA & PA
 - Select Amber lamps in DR1/PR1.
 - All other Rear facing lamps may be Red, Blue or Amber.
 - Lightbar operates in High Power, do not activate Low Power.
- NFPA compatible flash patterns are Inboard/Outboard or Left/Right