

930NH-4805-0129 FLASH PATTERN

LIGHTBAR LAMP CONFIGURATION

DF2	DF1	FC	PF1	PF2
DC				PC
DA				PA
DR2	DR1	RC	PR1	PR2

CONTROL WIRES ACTIVATED	STROBE LAMPS ACTIVATED
GRY REAR STROBES	DR2 & PR2 SIMULTANEOUS AND ALTERNATE WITH RCR & RCL SIMULTANEOUS
RED/WHT FRONT STROBES	FCL & FCR SIMULTANEOUS AND ALTERNATE WITH DC & PC SIMULTANEOUS

CONTROL WIRES FOR HALOGEN or LED LAMPS

CONTROL WIRE ACTIVATED	HALOGEN LAMP
BRN	DA-A DRIVER ALLEY
WHT/BLK	PA-A PASSENGER ALLEY
BLUE	DF2 & PF2
ORG	DA-F & DF1
BRN/WHT	PA-F & PF1
YEL	DR1 & PR1

NOTE: Apply +12vdc to appropriate control wire to activate desired function.