

950N-4805 NEOBE LIGHTBAR
0032 - FACTORY SETTING FLASH PATTERN

Progressive Slide Switch application

Mode 1

+12 vdc **ORANGE** Control Wire Activated

Front & Corner Warning Lamps: *Off*

Rear & End Warning Lamps: *Inboard/Outboard with End - 6 pulse Neobe*

Mode 2

+12 vdc **ORANGE & BLUE** Control Wires Activated

Front & Corner Warning Lamps: *Inboard/Outboard with Corner - 6 pulse Neobe*

Rear & End Warning Lamps: *Inboard/Outboard with End - 6 pulse Neobe*

Mode 3

+12 vdc **ORANGE, BLUE & WHITE/BLACK** Control Wires Activated

Front & Corner Warning Lamps: *Inboard/Outboard with Corner - 6 pulse Neobe*

Rear & End Warning Lamps: *Inboard/Outboard with End - 6 pulse Neobe*

Any other combinations of the ORG, BLUE and WHITE/BLACK control wires = OFF.

See 950N-4805 Appendix A for additional 950N-4805 Control & Power Wire functions.

NOTE: The 0032 configuration has a separate cable for customer controlled activation of DR1, RC and PR1 Halogen lamps. The DF1 / PF1 lamps are Halogen, were the inner elements are activated by BRN and the outer elements are activated by RED.