

# Revolution™

## Illumination Series LED Scenelights

### Installation and Instructions

#### WIRES

RED            Connect to Battery +12Vdc thru +24Vdc to activate  
 BLACK        Connect to Battery GROUND

#### ELECTRICAL

Input Voltage:        12Vdc thru 24Vdc

| Input Current:          | Steady Burn<br>Normal Mode |       | Steady Burn<br>Dim Mode |       | Default Flash<br>Normal Mode |       | Default Flash<br>Dim Mode |       |
|-------------------------|----------------------------|-------|-------------------------|-------|------------------------------|-------|---------------------------|-------|
|                         | 12Vdc                      | 24Vdc | 12Vdc                   | 24Vdc | 12Vdc                        | 24Vdc | 12Vdc                     | 24Vdc |
| R37/R46 Scene<br>Lights | 3.25A                      | 1.62A | n/a                     | n/a   | n/a                          | n/a   | n/a                       | n/a   |
| R79 Scene Lights        | 6.58A                      | 3.36A | n/a                     | n/a   | n/a                          | n/a   | n/a                       | n/a   |

Note: Complete installation with wire rated for 125% of amperage draw